




# 4-IN-1 Molding Instructions

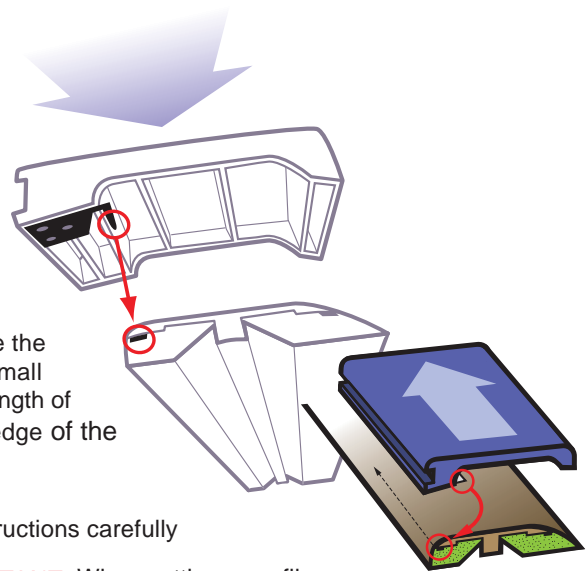


## THE SLITTER


The Harmonics® slitter can be used very simply to cut away one or two pieces of the profile to obtain an T-molding, reducer, baby threshold or square nose. Place the slitter above the profile so the blade on the underside of the slitter meets the small opening on the end of the profile. Slide the slitter in a smooth movement on the length of the profile. Take off the piece to be removed. Remove any unevenness on the edge of the profile by again moving the side of the slitter (sanding tool) along the profile.

**CAUTION:** Always wear gloves – the edge of the cut profile and the blade are sharp. Read the instructions carefully before use.

**IMPORTANT:** When cutting a profile, always lay it **horizontally** on a stable surface.

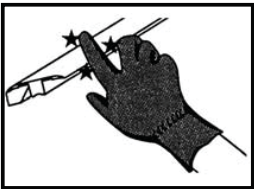


Use care: edges can be sharp

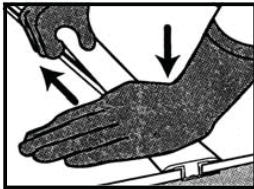

Press into track from one end



**THE RAIL:** Remove the plastic lip on the side of the rail and attach the rail to the ground with screws. Use the pre-drilled holes between the raised legs of the rail. Be aware of any piping in the ground. Use urethane construction adhesive (i.e. Liquid Nails) to attach the rail to any type of surface in addition to screws, or as a replacement for screws.

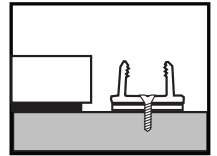

With other thicker flooring use removable lip as a booster.


**PREPARING FLOORING:** Install flooring with the dimensions shown below as the gap between your Harmonics® floor and your other surface. You can do this prior to receiving your Harmonics® molding. **The accuracy of this dimension is very important!**

- If you vary narrower, you may not allow the proper expansion gap to ensure adequate room for your flooring to expand and contract over time and seasons.
- If you vary wider, you can end up with the edge of the flooring exposed.




**PREPARING MOLDING:** First cut the profile to the correct length using a sharp saw. Use the slitter to cut away piece to transform it into the profile you require for each use. Follow the above instructions when using slitter. Don't forget to use the sanding tool on the side of the slitter to clean up the newly cut edge.

**PREPARING PLASTIC RAIL:** Cut the rail to the correct length using a saw or utility knife. Remove the plastic lip. Follow the above instructions when installing rail. Place rail between flooring and opposing surface. The illustrations below show the approximate placement of the rail, **but use a piece of your molding as a guide to find the right spot.**

**INSERTING PROFILE:** Once the rail has been attached in the open area between the two floor surfaces, gently press transition strip from one end of the rail to the other as shown above.

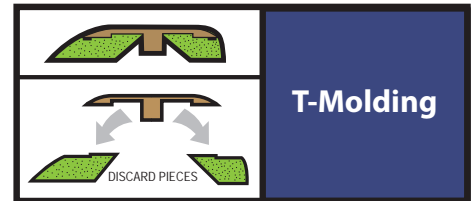

USE THESE MEASUREMENTS TO LEAVE THE PROPER GAP IF YOU HAVE TO LAY THE FLOORING BEFORE RECEIVING THE MOLDING  
**Make sure spacing is accurate and straight so no gaps show.**

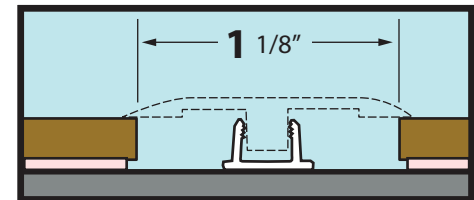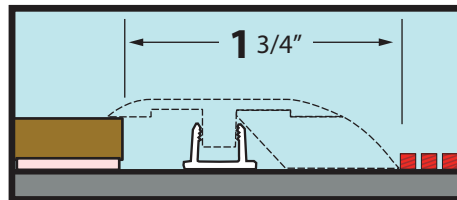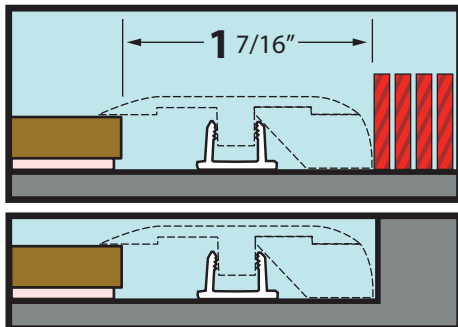

Drawings and placement are not to scale

FOR QUESTIONS REGARDING HARMONICS® MOLDING  
PLEASE CALL 1-888-459-9220 [www.harmonics-flooring.com](http://www.harmonics-flooring.com)